



MOUNTING INSTRUCTION

THE TRACKS ARE DELIVERED IN FOUR ROLLS

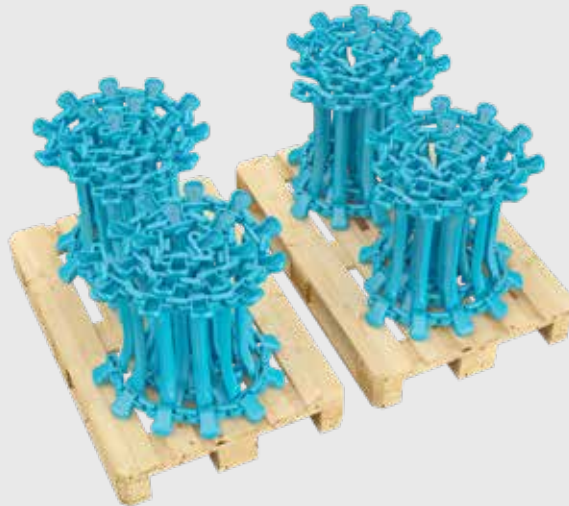


**ALWAYS PUT TOGETHER
TRACKS FROM THE SAME
PALLET**

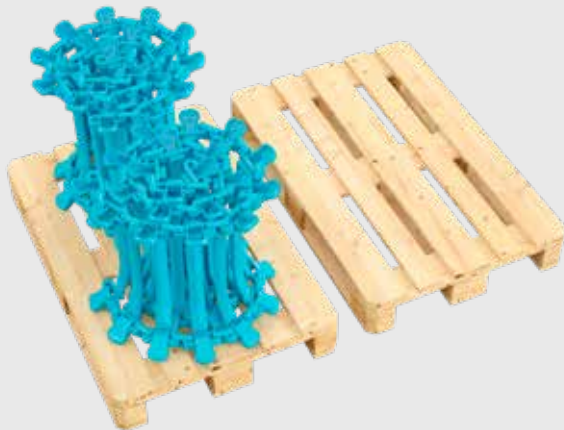

REMEMBER!

CHECK THE SERIAL NUMBER AGAINST ATTACHED DOCUMENTS

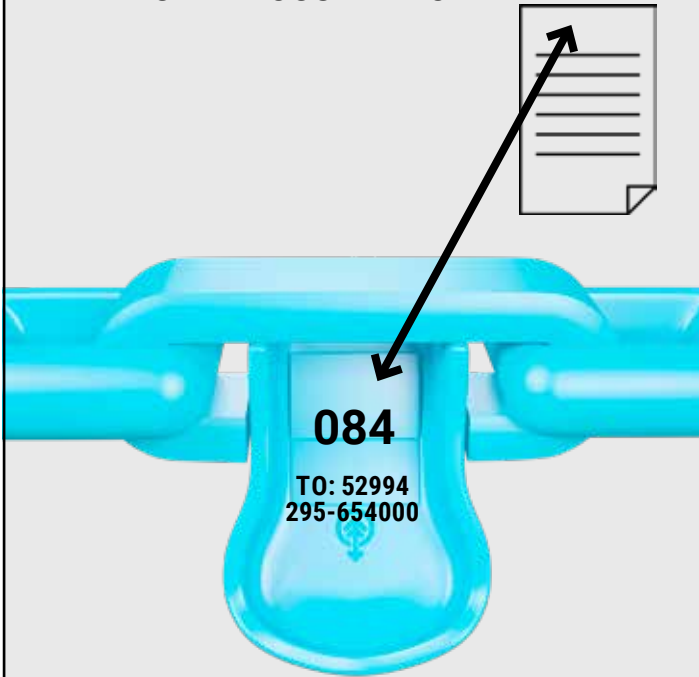

SAVE THE GUARANTEE CERTIFICATE




NOTE! THE TOOLS ARE PURCHASED SEPARATELY!



MANUAL




GEARED

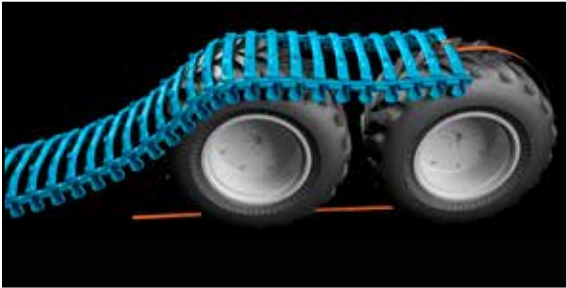


1

Unroll the track sections and join them together with large track locks. Drive the track on the bogie using straps or chain.

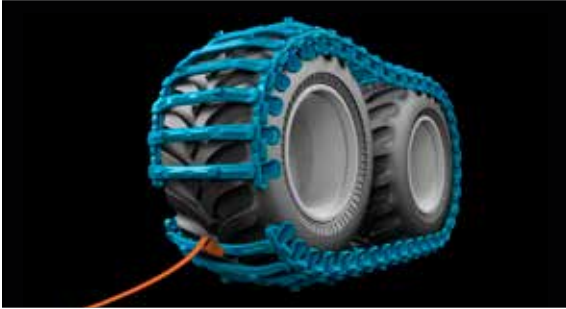


2

Drive the track around until the ends are at one end of the bogie.

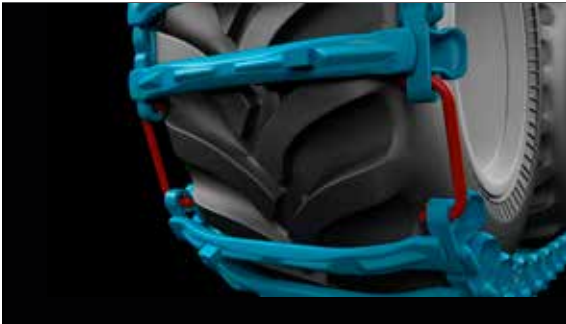


3

Unhook the strap or chain and mount the two clamps from the outside into the link hooks.

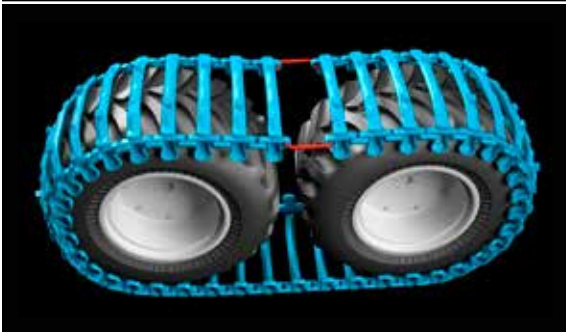


4

Drive forward slowly until the clamps are between the bogie wheels. **NOTE:** If the tires are new, it helps if they are wet so the track can slide easier. It may also be needed to help push up the track from the short edge towards the top.

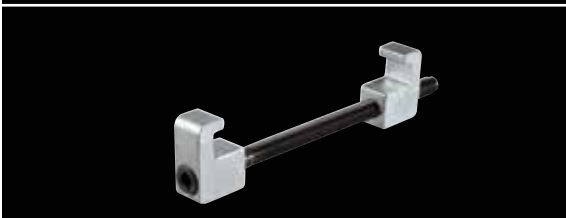


5

Mounting tool – tensioner – with screw.
(The picture shows a manual tensioner).

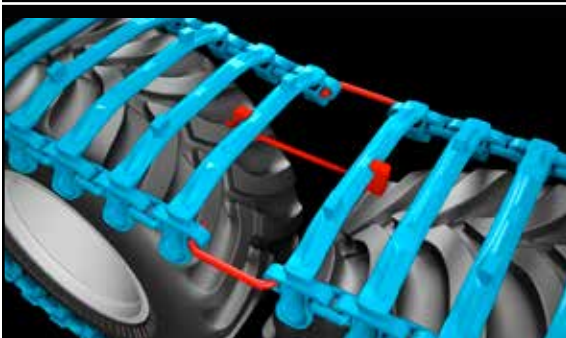

6

Mount the installation tool on the cross members from below. Make sure that it is in the middle. Then use a ratchet shaft screwing together the stretcher with. Don't pull harder than necessary. Pay attention so as not the cross member turns.

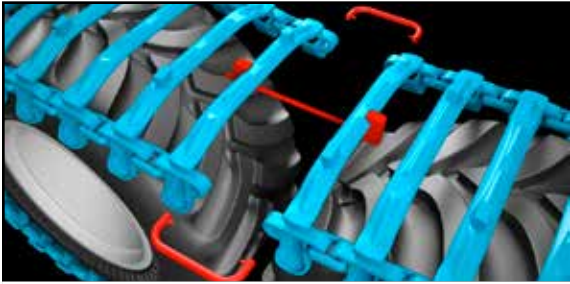

7
When the clamps are loose, remove them from the track.




8
Continue to tighten the track until you can install the track lock. The track lock is inserted from the inside of the track.



9
Mount the track lock plate from the outside of the track.



10
Insert the bolt through the top of the track lock. This protects the nut from ground damage.

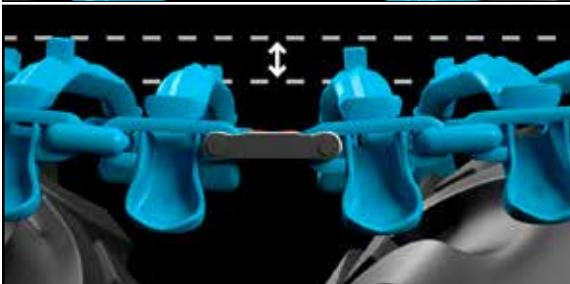

11
Remove the tool. The proper track tension is 25 - 50mm, 1 - 2" sag in the middle.

Part.no	Track Model
036-468510	ECO
036-468511	OF
036-468513	U
036-468514	BALTIC
036-468518	EVO
036-490740	EX
036-468250	KOVAX
036-468260	COVERX
036-468270	COVERX M
035-470130	SPARE U CLAMP, SINGLE

